

Alma

Daybed

Technical file



FABRIC



RECLINABLE



SPARE PARTS



RECYCLABLE



ASSEMBLY

Description

Frame

Manufactured with a 1,4 mm thick aluminum alloy profile.
It has two independent backrests adjustable in 5 positions.

Coverage

Polyester fabric reinforced with Teflon.
The position of the cover is adjustable.

Paint

Powder paint based on polyester resins that offers great resistance to light and outdoor environments in accordance with QUALICOAT international specifications and ISO-2409 and ISO-2360 regulations.

Mattress

Made with synthetic foam and covered with nautical faux leather fabric¹.
Dimensions: 196 cm long (including the backrest), 187 cm wide and 12 cm thick.
Backrest dimensions: 93 cm wide, 76 cm long and 12 cm thick.

Accessories

Caps and studs made of PVC.
Includes two additional pillows².

Security

Product certified according to European safety regulations EN-581-1:2017 and EN-581-2:2017.



Alma


Daybed



Alma

Daybed

Capacity

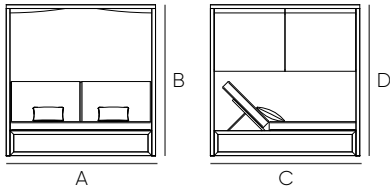

A - 198 cm
B - 200 cm
C - 198 cm
D - 200 cm

77 kg

Package	Units	Measures	Weight	Volume
Box	1 u.	200x205x42 cm	77 kg	1,76 m ³

Loading capacity	Mega trailer	Cont. 20'	Cont. 40'	Cont. 40' High Cube
Alma	34 u.	- u.	- u.	34 u.

Finishes

Frame

Matte texture



Fabric

Nautical





Alma

Daybed

Maintenance plan

Weekly

Visual check of the general condition, removing dirt and ensuring there are no broken parts or damage that could be a danger to users.

Monthly

Check that the aluminum structure has no damage or deep scratches.

Check the structural strength and stability.

Check the condition of the caps and studs.

Annual

Repair any damage to the paint.

Replace any worn or damaged parts.

Wintering and storage

Clean with soapy water and a soft cloth.

Remove damp stains, sand and seawater.

Store horizontally in a dry place.

Observations

- Always use Balliu spare parts.
- Balliu does not manufacture parts for other brands.
- If the product is subject to heavy use, maintenance checks must be carried out more frequently.
- Do not use the product until maintenance is completed.
- Do not use aggressive chemicals to clean the product.
- Always use products with a neutral pH.
- Use a soft cloth to clean the product.

