

## Etna

Central table

Technical file



### Description

#### Frame

Manufactured with a 2 mm thick 6063-20 aluminum alloy profile.

#### Screws

Manufactured in AISI 304 stainless steel that offers great resistance to corrosion in marine environments.

#### Paint

Powder paint based on polyester resins that offers great resistance to light and outdoor environments in accordance with QUALICOAT international specifications and ISO-2409 and ISO-2360 regulations.

#### Accessories

Caps, studs and regulators made of polypropylene resin resistant to UV rays.


#### Tabletop

HPL compact board formed by 10 mm thick resins.

# Etna

## Central table

### Capacity

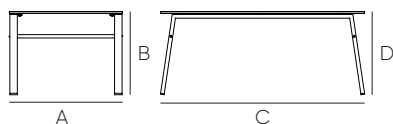

A - 60 cm      C - 110 cm  
 B - 44,5 cm    D - 44,5 cm

Package	Units	Measures	Weight	Volume
Box	1 u.	115x63x8 cm	13,6 kg	0,05 m <sup>3</sup>
Pallet	36 u.	115x127x155 cm	514,6 kg	2,26 m <sup>3</sup>

### Finishes

#### Frame

Matte texture



White    Aluminum    Turtledove


#### Tabletop

HPL Basic



White    Grey

HPL GD



Prado    Moonwalk    Skyline



## Etna

### Central table

---

#### Maintenance plan

---

##### Weekly

Visual check of the general condition, removing dirt and ensuring there are no broken parts or damage that could be a danger to users.

##### Monthly

Check that the aluminum structure has no damage or deep scratches.  
Check the structural strength and stability.  
Check the condition of the caps and studs.

##### Annual

Repair any damage to the paint.  
Replace any worn or damaged parts.

##### Wintering and storage

Clean with soapy water and a soft cloth.  
Remove damp stains, sand and seawater.  
Store vertically in a dry place in stacks of 10 units.

##### Observations

- Always use Balliu spare parts.
- Balliu does not manufacture parts for other brands.
- If the product is subject to heavy use, maintenance checks must be carried out more frequently.
- Do not use the product until maintenance is completed.
- Do not use aggressive chemicals to clean the product.
- Always use products with a neutral pH.
- Use a soft cloth to clean the product.